

ELECTRONIC MORTICE LOCK DOOR TEMPLATE



RADIUS

FIT DOORS 33MM TO 50MM THICK

BACKSET 60MM




**EASY TO
INSTALL**
STEP-BY-STEP
VIDEO GUIDE &
USER MANUAL

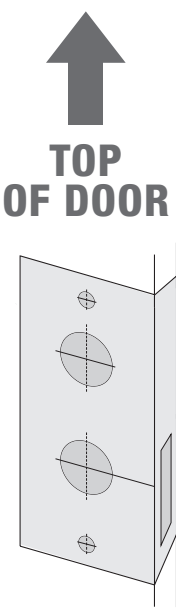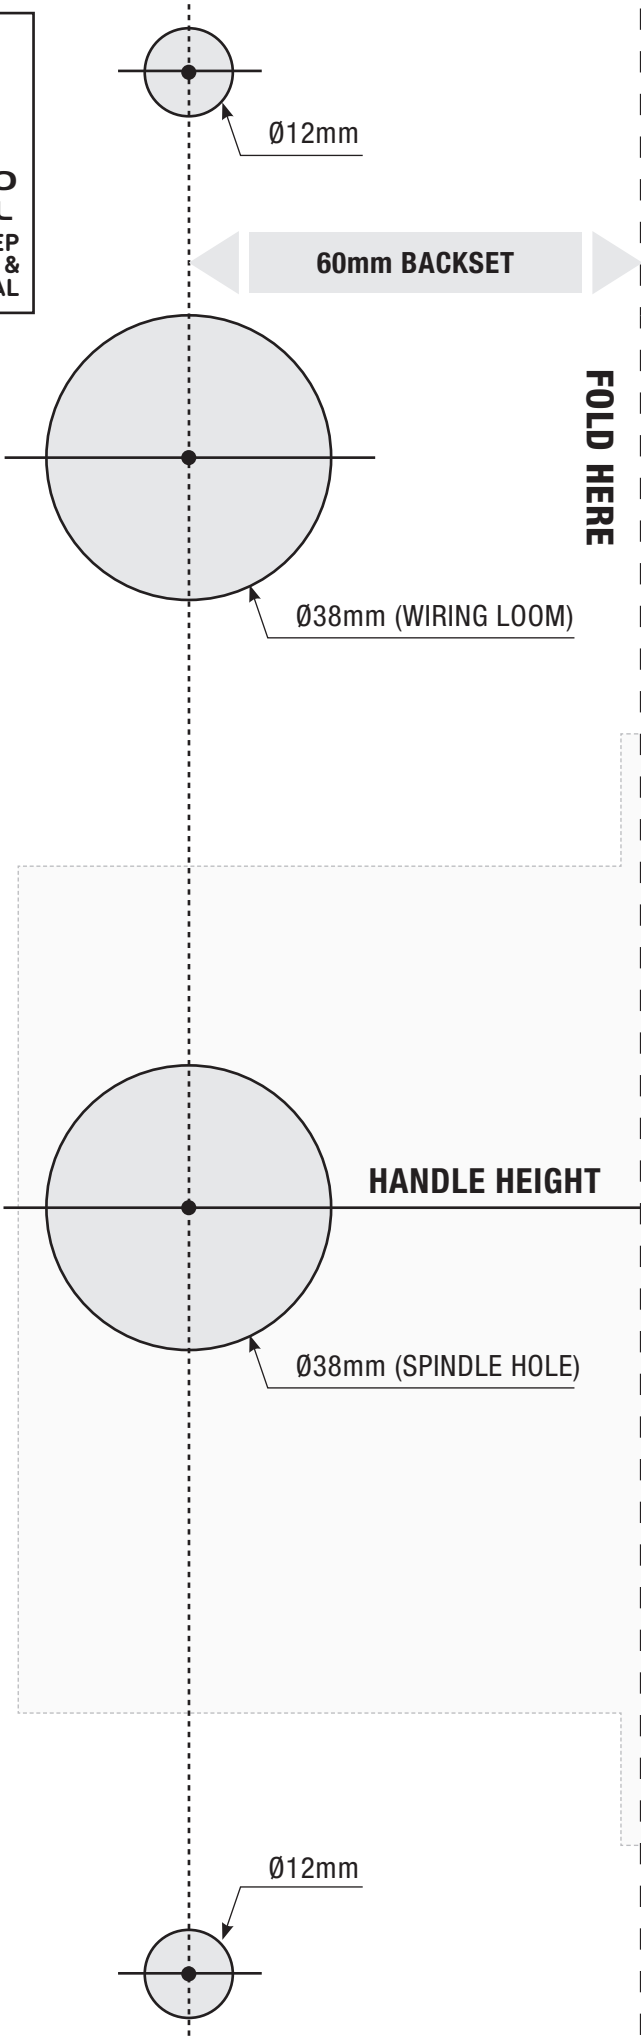


TOP
OF DOOR

POSITION ON EDGE

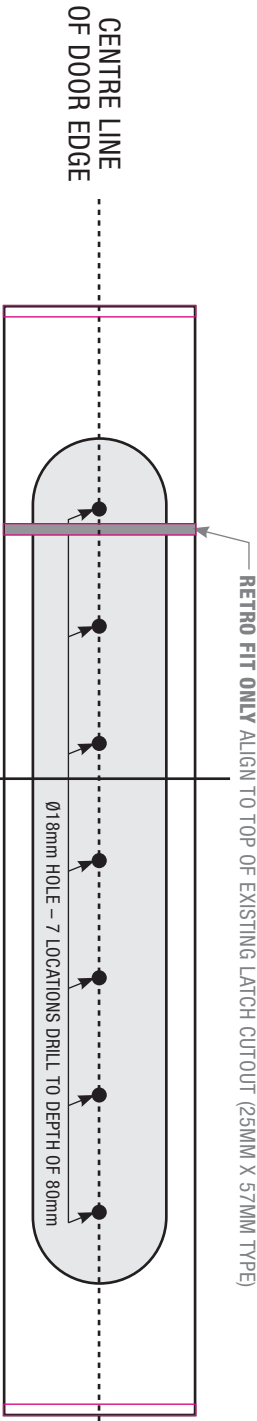

Mark and drill holes from both sides of the door.

RATIO 1:1

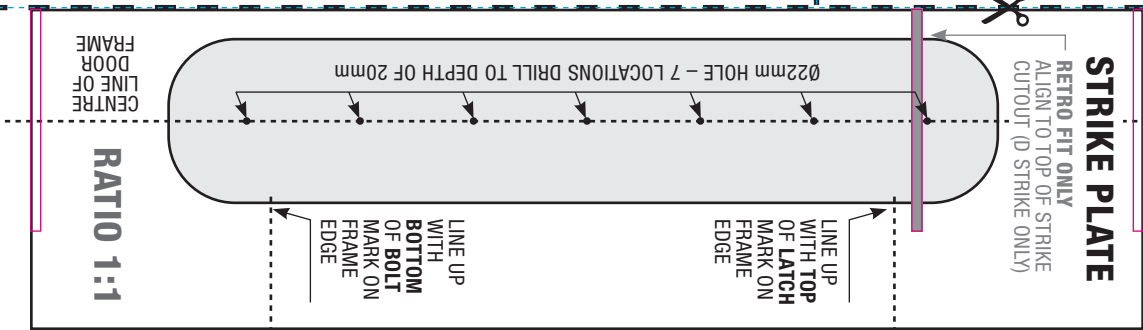

ELECTRONIC MORTICE LOCK DOOR TEMPLATE

RADIUS


FIT DOORS 33MM TO 50MM THICK

BACKSET 60MM



**EASY TO
INSTALL**
STEP-BY-STEP
VIDEO GUIDE &
USER MANUAL

↑
**TOP
OF DOOR**

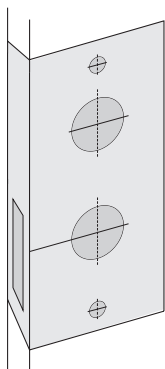


POSITION ON EDGE


FOLD HERE

60mm BACKSET

Ø12mm

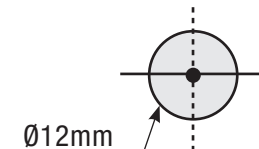


Ø38mm (WIRING LOOM)

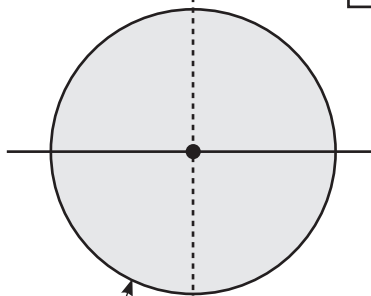


HANDLE HEIGHT

Ø38mm (SPINDLE HOLE)

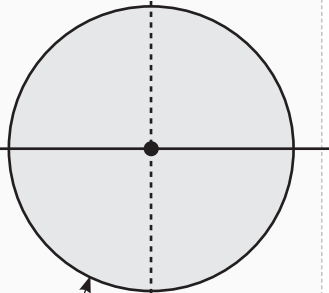

Ø12mm




RATIO 1:1

Mark and drill holes from both sides of the door.



STRIKE PLATE

RETRO FIT ONLY
ALIGN TO TOP OF STRIKE
CUTOUT (Ø STRIKE ONLY)

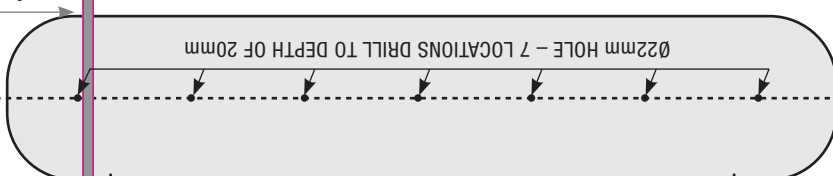


LINE UP
WITH TOP
OF LATCH
MARK ON
FRAME
EDGE

LINE UP
WITH
BOTTOM
OF BOLT
MARK ON
FRAME
EDGE

CENTRE
LINE OF
DOOR
FRAME

RATIO 1:1

CENTRE LINE
OF DOOR EDGE

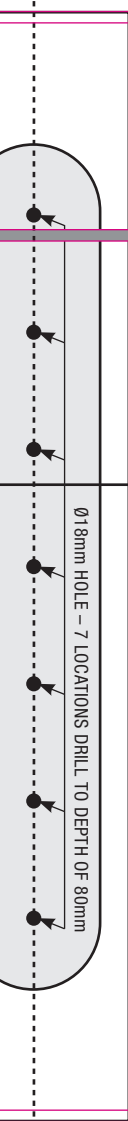

RETRO FIT ONLY ALIGN TO TOP OF EXISTING LATCH CUTOUT (25MM X 57MM TYPE)

CHISEL FACEPLATE
FLUSH WITH DOOR EDGE