

TRILOCK DUMMY FITTING INSTRUCTIONS


- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Drill holes (suggest pilot holes first 3mm, 1/8") then the correct size 10mm, 3/8" from both sides of the door.

Contemporary Series


- Install threaded posts to the outside faceplate.

Traditional Series

- Install blind screws and brass posts to Trilock external faceplate (this is the faceplate without the rectangle snib push-button).
- Insert dummy plug into the inside of both plates before affixing faceplates to door. (To help hold dummy plugs in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.

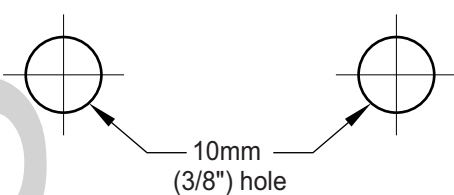

Fit here on door edge

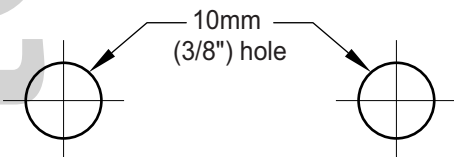

FOLD HERE

Fit here on door edge

TRILOCK DUMMY FITTING INSTRUCTIONS



- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Drill holes (suggest pilot holes first 3mm, 1/8") then the correct size 10mm, 3/8" from both sides of the door.

Contemporary Series

- Install threaded posts to the outside faceplate.

Traditional Series

- Install blind screws and brass posts to Trilock external faceplate (this is the faceplate without the rectangle snib push-button).
- Insert dummy plug into the inside of both plates before affixing faceplates to door. (To help hold dummy plugs in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.

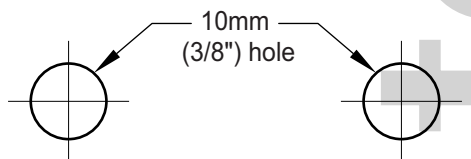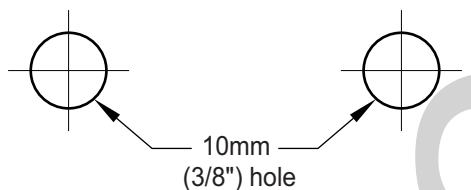

Installation template for Gainsborough Trilock
Traditional & Contemporary Series